

## Crestron MP-B20 User Guide for Instructors



### System On/Off

Powers On or off the projection system. **NOTE:** The computer is controlled separately.

### Sound On/Off

Sound On is set as part of System On. Volume is controlled with a knob or slider.

### Mics On/Off

Mics On is set as part of System On. Mics off if desired, temporarily or otherwise.

### Image Blank

Toggled; blanks all displays but local monitor. **NOTE:** Not a substitute for System Off.

### Image Freeze

Toggled; projector will display the current image until button is pressed again.

### Image Reset (Sometimes 1 and 2)

Corrects most AV issues. Please leave 5s between Reset 1 and Reset 2, if applicable.

### **Source Buttons**

Blue labels and/or device pictures. Selected source is sent to the projection system.

**NOTE:** VGA uses a separate standard audio cable for sound.

### **Camera Controls**

Directional buttons are used to control a room's cameras.

Auto-Focus is found to one side or in the center of the directional buttons.

**NOTE:** If in the latter location, the button is unlabeled due to space limitations.

